

Triniq

NO.1
User manual

1 Instructions for use and product drawings


Dear user!

Thank you for using this smart lock. Before you install and use it ,please check the list of accessories carefully. Please read the installation instructions and follow its steps, otherwise we will not be responsible for any hazards or damages.

⚠Important Notes Please read and set the function according to the specific product model.

- 1.Storage capacity: 5 sets of administrators (fingerprints/cards/passwords), with a total of 253 sets of users (up to 50 fingerprints)
- 2.When low battery alarm, please replace the same type of battery in time and pay attention to the positive and negative pole installation to ensure the normal use of the lock.(New and old batteries cannot be used at the same time)
3. Please keep the mechanical key with you when not in use and do not keep it indoor.

Product image

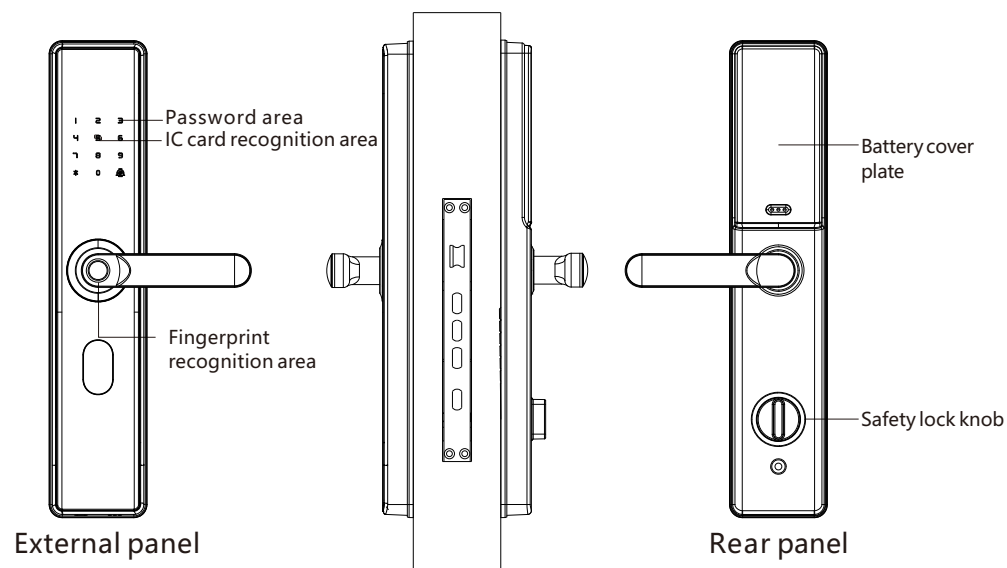


2 Product List/Installation Explosion Diagram

Please carefully check the following list after opening the packaging box. If any omissions are found, please promptly request them from us or the agent.


Serial number	Name	Quantity	Remarks
1	External panel (including plastic pad)	1	
2	Rear panel (including plastic pad)	1	
3	IC card	2	
4	Install accessory kit	1	
5	certificate	1	
6	Product manual	1	
7	Lock box	1	Including 2 emergency keys

- 1.External lock handle
- 2.Decorative Circle
- 3.Lock cylinder cover
- 4.External lock middle frame
- 5.External lock clutch
- 6.External lock bottom plate
- 7.External lock plastic bottom plate
- 8.Rear clutch assembly
- 9.Rear lock plastic bottom plate
- 10.Battery compartment
- 11.Rear lock frame
- 12.Battery cover
- 13.Rear lock handle
- 14.Lock knob

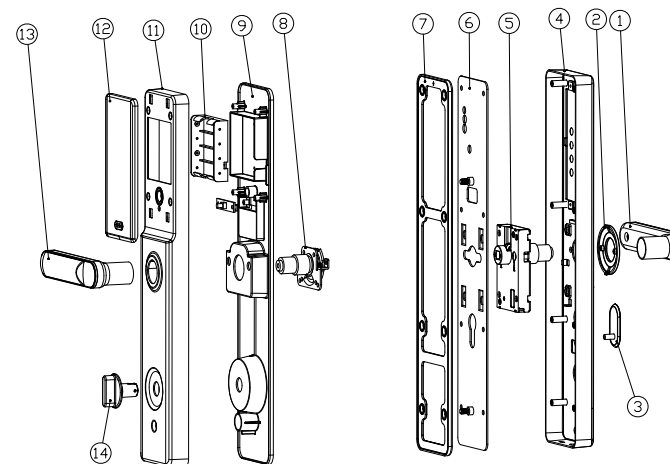


3 Pre installation instructions

- ### 3.1 Confirm the front door opening direction before installation
- This smart lock can be applied to doors with four opening directions: left outward pull, left inward push, right outward pull, and right inward push.

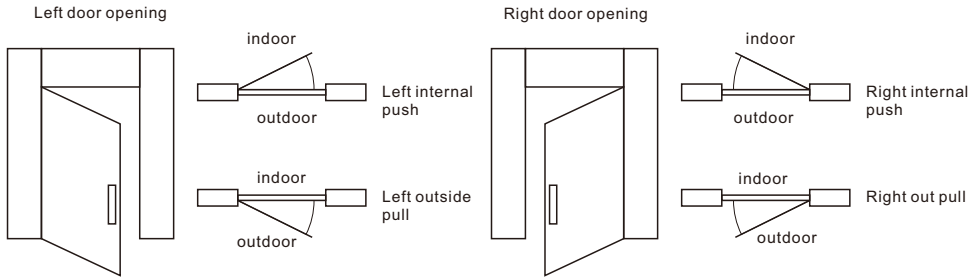

- ### 3.2 Change the handle direction
- Please select the direction of the handle according to the opening direction of the door.


Steps: 1. Remove the pan head screws.
2. Rotate the handle to the desired direction.
3. Reinstall the removed pan head screws

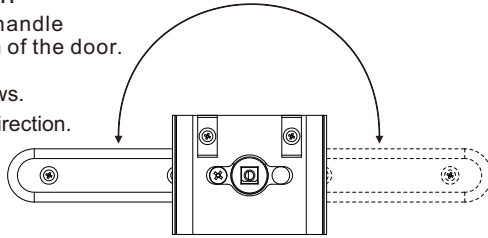

- ### 3.3 Change the latch bolt direction of the lock body

According to the requirements for opening doors both inside and outside, change the latch bolt direction of the lock body as you need.

Tilt your tongue to the bottom
Rotating tongue with reverse direction

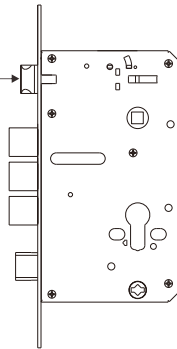


⚠ Attention


The default factory configured accessory package is suitable for doors with a thickness of 50MM-100MM. If the door thickness is of other specifications, please contact us

4 Installation steps


- ### 4.1 Make a hole on the door according to the opening template, and then Insert the lock body into the door frame

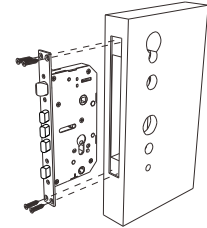




- ### 4.2 Tighten the four fixing screws on the lock body

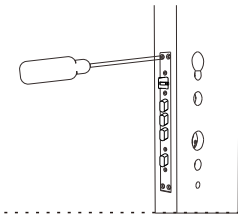


- ### 4.3 First press the pin of the square rod, then install the square rod as the picture.

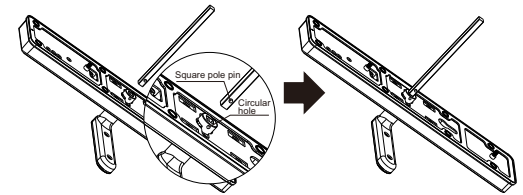

- ### 4.4

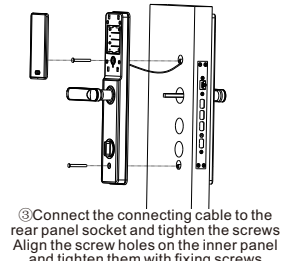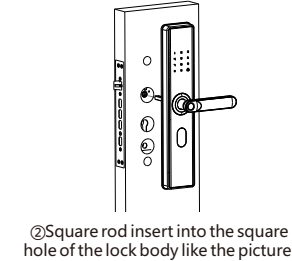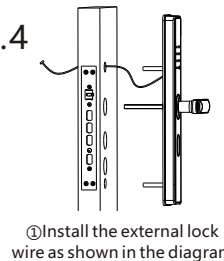

- ### 4.5 Install the battery, cover the battery cover, and install the side buckle assembly to complete the installation. Press down and lift the handle, turn the mechanical key, and check if all components are connected properly

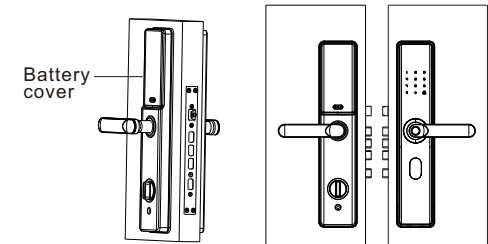

5 Technical parameter

Working power supply (voltage)	3.8-6.5V
Alarm voltage	4.8V
Static average current	Less than 50ua
Automatic exit time	Set the 20 second verification page to 10 seconds
Backup current	5V (can be powered by USB interface)
Password length	6-10 digits
Administrators	5 sets (password/card/fingerprint)
User Information	253 (password/card/fingerprint)
Fake password	Support 20 digit fake passwords
Card type	Mifare-1
Volume level	Levels 1-6
Local record query	Total capacity 511 pieces

6 Door lock operation instructions


6.1 Initial state

- (1) Remove the smart lock battery.
- (2) Press and hold the initialization button on the back panel.
- (3) Install the smart lock battery.
- (4) Waiting for the system 5S initialization confirmation countdown, a "beep" sound will be emitted every second.
- (5) When the voice player confirms the factory settings, please press the # key. To return, please press the # key. The system enters the initialization process.
- (6) After waiting for a few seconds, when the language plays "initialization successful", the system initialization is complete. At this time, all unlock information and user information in the system are cleared, and the system enters demonstration mode. After that, it enters the boot process.

Attention:

The default administrator password in this lock demonstration mode is "123456". In demonstration mode, any Mifare-1 card can be unlocked, any fingerprint can be unlocked, and the default password is "123456". After successful initialization, the lock needs to be reset before it can be used!

6.2 Add administrator

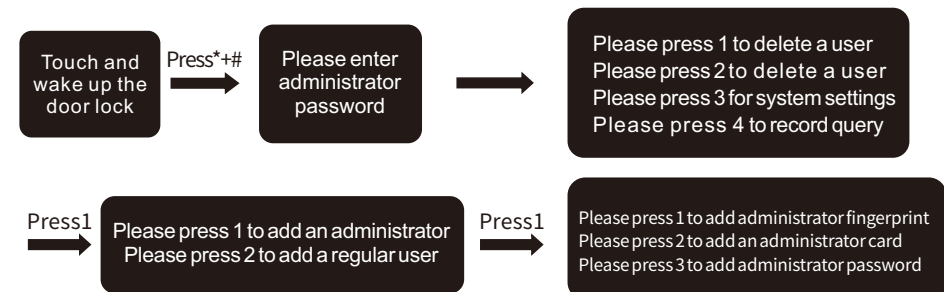


(1) Administrator fingerprint settings : press 1 to add fingerprint - voice: Please press your finger, take it away and put it back again. Fingerprint recognition will be performed 5 times, and the administrator's fingerprint registration will be successful.

(2) Administrator card settings : press the second button and receive a voice prompt to swipe your card. Place the card close to the sensing area and receive a voice prompt saying 'setting successful'.

(3) Administrator password setting press the 3rd key for voice prompt to enter new password. Press # to confirm. Voice prompt: Please enter ***** again. Press # to confirm. Voice prompt: Setting successful.


6.3 Add regular users

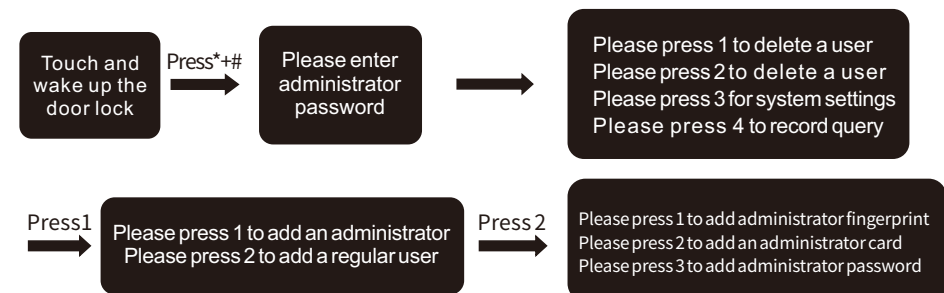


6 Door lock operation instructions

- (1) Ordinary user fingerprint settings : Press 1 to add fingerprint - voice: Please press your finger, take it away and put it back again. Fingerprint recognition will be performed 5 times, and the normal user's fingerprint registration will be successful.
- (2) Ordinary user card settings: Press the second button and receive a voice prompt to swipe your card. Place the card close to the sensing area and receive a voice prompt saying "setting successful".
- (3) Ordinary user password setting: Press the 3rd key for voice prompt to enter new password. Press # to confirm. Voice prompt: Please enter ***** again. Press # to confirm. Voice prompt: Setting successful

6.4 Delete user information by group

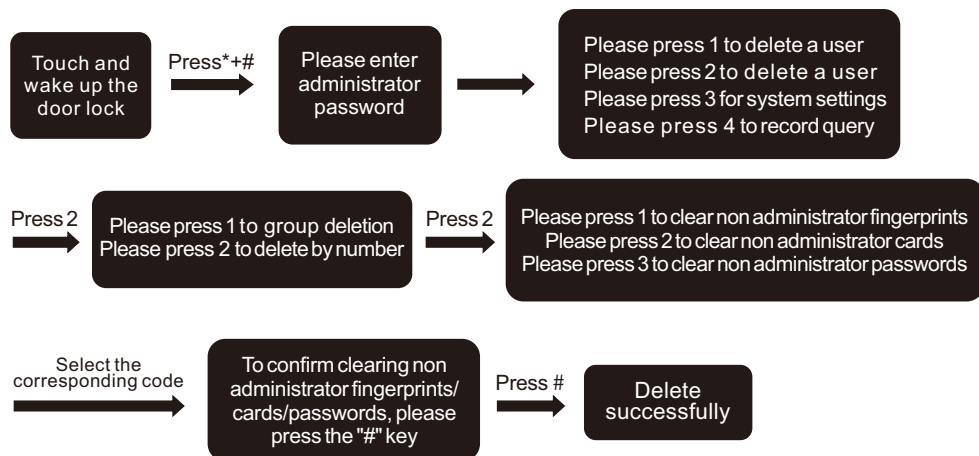


6.5 Delete administrator/user information by number

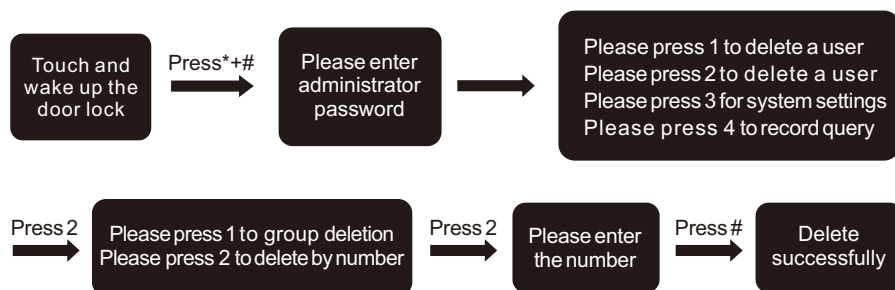


6 Door lock operation instructions

6.6 System settings

① Set time

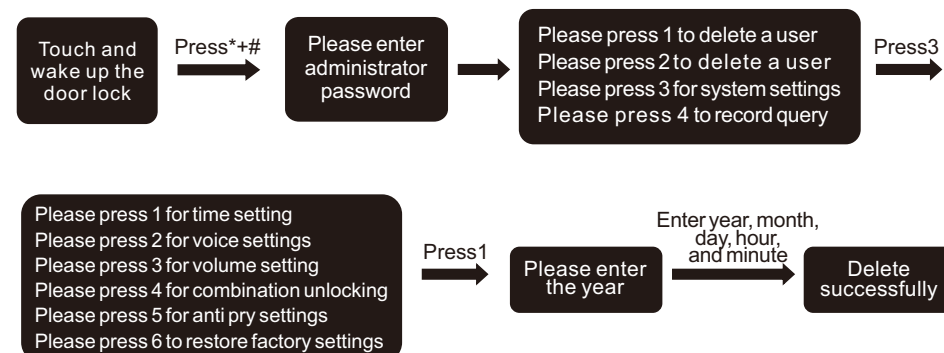


② Language settings

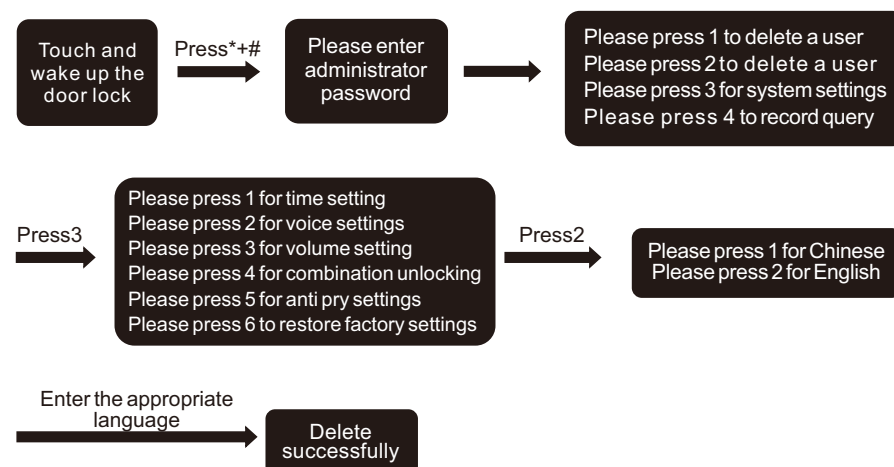


6 Door lock operation instructions

③Volume Setting

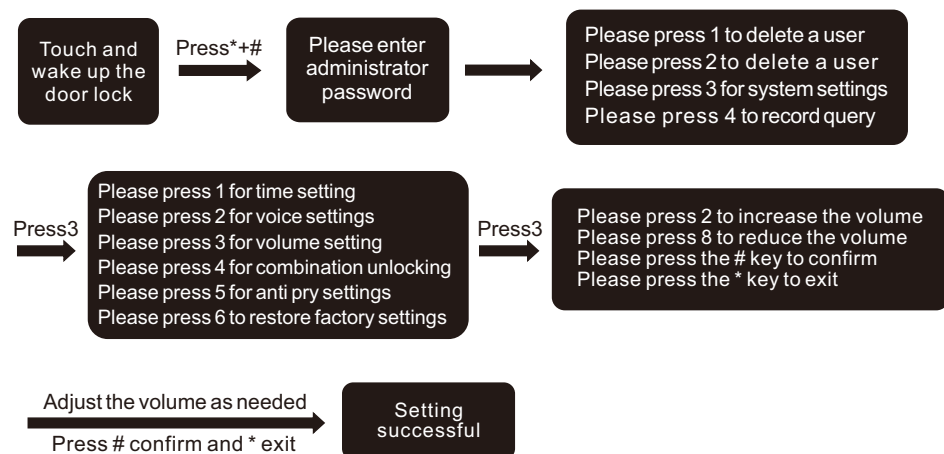


④Unlocking method setting

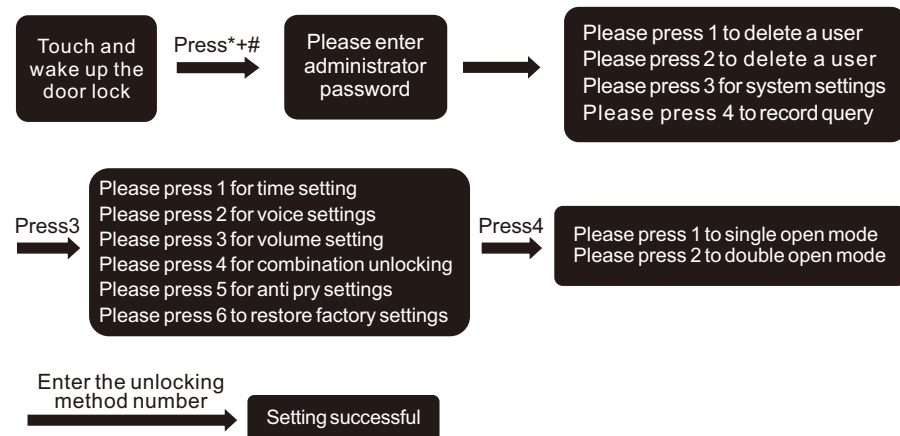


6 Door lock operation instructions

⑤Anti pry setting

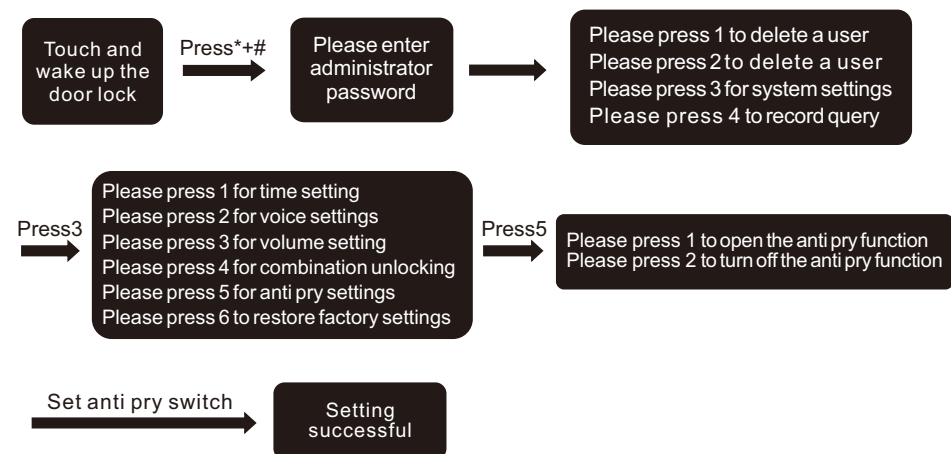


⑥Restore factory settings

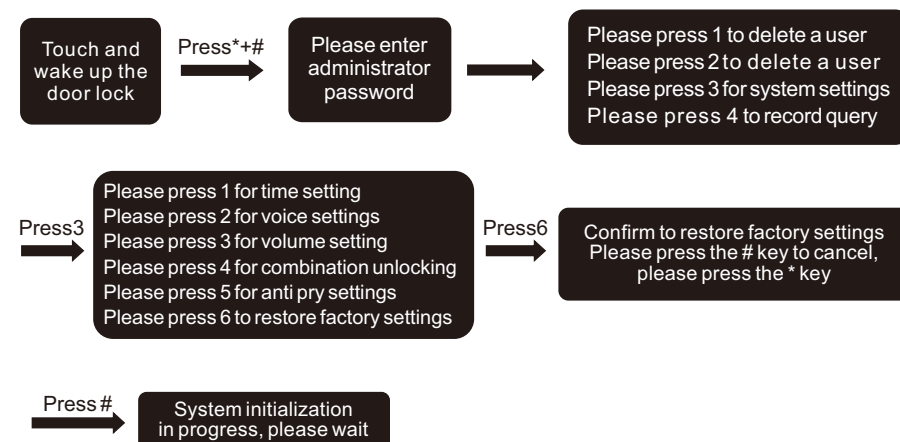

6 Door lock operation instructions

6.7 Record settings

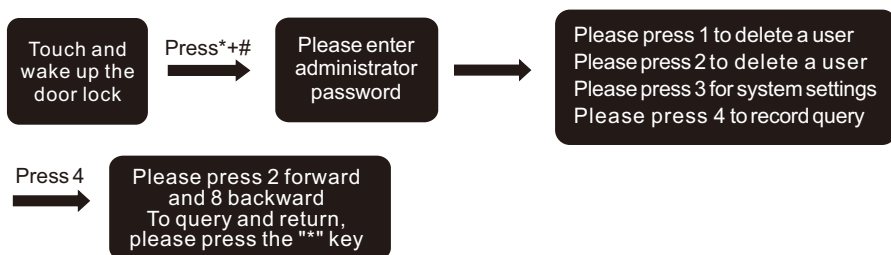

6.8 Doorbell

Press the doorbell button in either verification mode or sleep mode, and the doorbell will ring twice in a row.

6.9 Low battery alarm

1. When the battery is in a low battery state, it will remind you after unlocking that the battery level is low.
2. Backup power supply: Can be connected to an external USB interface for power supply and door opening.

6.10 Alarm lock

When entering incorrect unlock information more than 5 times within 5 minutes, the system enters a locked state and will automatically unlock after 180 seconds of locking.

6.11 Anti pry alarm

If the anti pry button is triggered, the system will enter a continuous alarm for 30 seconds, and the alarm can only be cancelled after entering valid unlocking information to unlock.

6.12 Password security level check


1. In dual open mode, it is necessary to enter two different numbers of unlock information before unlocking.
2. However, the dual open mode is only valid for ordinary users. Entering administrator information in the dual open mode will directly unlock the lock and will not respond to dual open.

6 Door lock operation instructions

6.13 Instructions for use

1. There are two ways to initialize the operation:

①

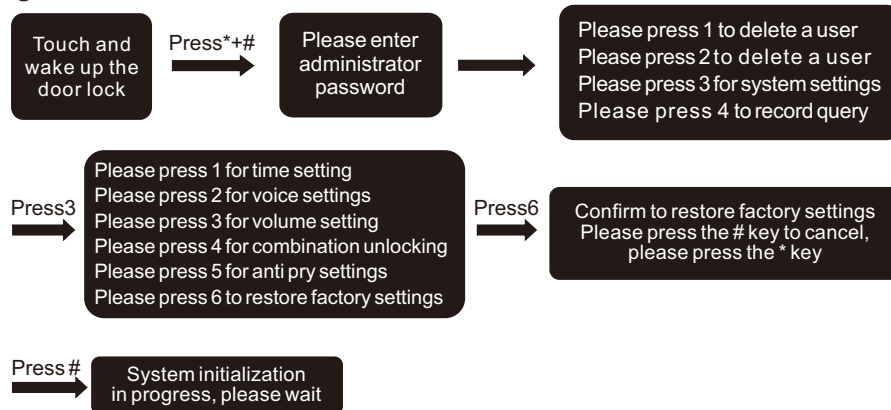

②



2. When swiping the card to unlock, the system needs to be awakened before the card can be swiped.

6.14 User safety precautions

- 1: For your safety, please change the original factory password "123456" to your own administrator password before using this product.
- 2: It is recommended to use multiple fingerprints as administrator information and set a set of administrator passwords.
- 3: The mechanical emergency key must be hidden in a safe place outside the door and prepared for emergency use! The company is not responsible for any consequences caused by the emergency key being locked inside the house, resulting in the inability to open the door urgently.
- 4: Safely store IC cards to prevent loss and duplication. Open the door! Please read the product manual carefully when installing and starting to use the above four points!

7 Warranty card

Warranty

1. One year free warranty since the date of purchase. If the warranty card and valid purchase certificate cannot be provided, or the purchase certificate has been tampered with, the warranty period shall start three months from the date of production of the airframe.

2. During the warranty period, under the condition of normal use according to the operation manual, the product defects (determined by the company's official staff); Repairs are made free of charge.

3. During the warranty period, the following conditions will not be repaired free of charge:

- Artificial damage caused by improper use, such as improper parts, improper installation, failure to use in accordance with the instructions, misuse or negligence caused by damage, etc. Damage caused by transportation and other accidents. Repair and modification not approved by the company. Other damage caused by force majeure (such as natural disaster, abnormal voltage, etc.).

- Normal use of the product caused by aging, wear and tear, but does not affect the normal use of the product.

4. The appearance of the product is damaged by artificial scratches, fragile and consumable products and not within the scope of warranty, such as batteries.

Product model

Activation code

Dealer name

Purchase date

User name

Address of the user

Phone

Invoice no.

You phone

